

RYDIS H67
Hybrid Robot Vacuum Cleaner
QUICK USER GUIDE



RYDIS H67
Hybrid Robot Vacuum Cleaner
QUICK USER GUIDE



RYDIS H67
Hybrid Robot Vacuum Cleaner
QUICK USER GUIDE

Product Maintenance

Battery Maintenance

The longer batteries are used, the shorter the usage time becomes.

- We guarantee twelve (12) months in general usage environments.
- The charging time is around 120 min.
- For purchase of additional batteries, please contact our service center or visit the Moneual online shop at www.moneualusa.com.



Filter Maintenance

We recommend to detach the Dust Filter when you clean and assemble again for the next use.
The Filter might get defect or reduced filter life-cycle itself if you clean dust filter with water.

We recommend to clean the Dust Filter when it is more than full.
Suction power will be reduced if you do not clean the Dust Filter properly.



We recommend to change the Dust Filter every 6 months depending on cleaning environment.

Main Brush Maintenance

The Main Brush can be cleaned with water. After cleaning the main brush with water, dry it completely in the shade.


- Install the brush in the hexagon shape direction of the right side.



Information Display


Control buttons and Operation Lamp

- ① Start/Stop button
- ② Main Power On/Off button
- ③ Mode selection button
- ④ Battery lamp
- ⑤ Charging mode lamp
- ⑥ System Error lamp
- ⑦ Turbo Suction lamp
- ⑧ Daily Reservation lamp
- ⑨ 1-Hour Reservation lamp
- ⑩ Room Selection lamp
- ⑪ Shadow Cleaning mode lamp
- ⑫ Automatic Cleaning mode lamp
- ⑬ Mop Cleaning mode lamp

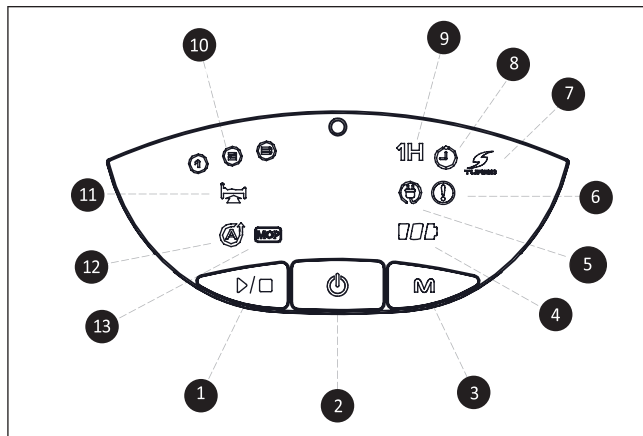

Remote Control

Descriptions for Remote Control buttons

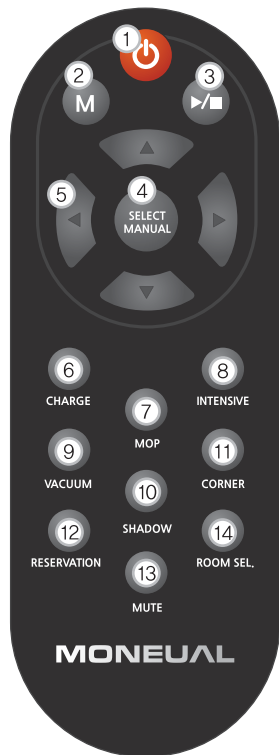

① POWER

Turns main power on/off.

② MODE Selection

Selects the cleaning mode.

③ START/STOP

Starts selected operation.
Stops current cleaning.

④ SELECT MANUAL

Acts as the select button for various setup modes.
Used for manual cleaning operation

⑤ DIRECTION

In Manual Cleaning mode, moves the robot vacuum cleaner forward and backward and make the Robot Vacuum Cleaner rotate to the left and right directions.



◆ Functions available with the main body of the robot cleaner:
Automatic cleaning, Shadow cleaning, Mop cleaning, Charging.

◆ Functions available with the Remote Control :
Automatic cleaning, Mop cleaning, Shadow cleaning, Intensive cleaning, Corner cleaning, Manual cleaning, Charging, Turbo control, Reservation setting, Room Selection, Mute.

⑥ CHARGE

Moves the robot vacuum cleaner to the charging station.

⑦ MOP

Selects the Mop Cleaning mode.

⑧ INTENSIVE

Selects the Intensive cleaning mode.

⑨ VACUUM

Selects the Turbo suction.

⑩ SHADOW

Selects Shadow cleaning mode

⑪ CORNER

Selects the Corner Cleaning mode.

⑫ RESERVATION

Setup Reservation Cleaning.

⑬ MUTE

Turns on/off operation announcement tone.

⑭ ROOM SEL.

Makes the robot vacuum cleaner move to the selected room.



※Product components



Rydis Setup
Basic Cleaning
Product Maintenance
Information Display
Remote Control



Rydis Setup

Charging Station Setup

1. Plug the Charger Adapter Power Cord in the Charger Adapter and connect with the power outlet.
2. Connect the Charger Adapter to the Charging Station.
3. Arrange the position of the Charging Station.

- The Charging Station should have at least 3,3ft (1m) clearance from the front and side areas.



Installing the Side Brushes

- Install the Side Brush in the direction of "D".
- Install the Left-Side Brush to "L" direction and Right-Side Brush to "R" direction



Basic Cleaning

H67 Cleaning Outline


Cleaning Type	Usage At	Purpose	Note	How to Operate	Cleaning Modes	Page
1. Automatic Cleaning with mop attached	Hard Floors	Mopping with Vacuum	Hard Floors Only Does not climb the carpet areas, footholds or thresholds	Start button with mop attached	Automatic (Default)	20
					Intensive	23
					Corner	24
					Shadow	25
					Manual	27
					Reservation	28
2. Automatic Cleaning without mop	Carpet / Hard Floors	Vacuum Only	None	Start button without Mop	Automatic (Default)	20
					Intensive	23
					Corner	24
					Shadow	25
					Manual	27
					Reservation	28
3. Mop Cleaning	Hard Floors	Mopping Only	Hard Floors Only Does not climb the carpet areas, footholds or thresholds	Mop button with Mop	Mopping	22

Automatic Cleaning Mode


1. Turn on the System Power Switch on the Main Body



2. Turn on the main power with 2 options :

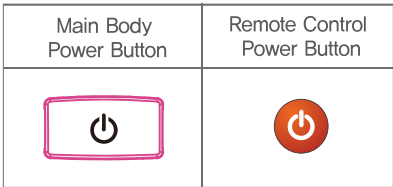

3. Press the [START/STOP] button with 2 options :

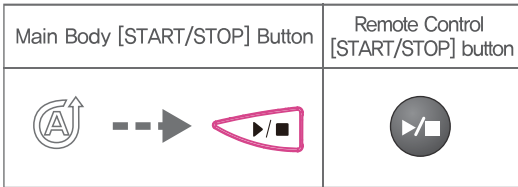

4. The Automatic Cleaning mode gets started.




- ◆ The robot vacuum cleaner does not climb the carpet areas, footholds, or thresholds when Mopping Guard is installed.

Intensive Cleaning Mode

From the current position, the robot vacuum cleaner performs Intensive Cleaning mode over the 3,3ft radius area.

1. Turn on the system power.
2. Turn on the main power.
3. Select the Intensive Cleaning mode.
4. After cleaning is completed, the robot vacuum cleaner stops at its current place.

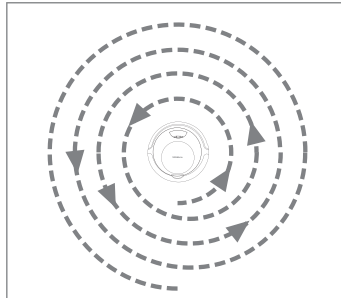

Main Body button	Remote Control
Intensive Cleaning mode can not be selected by Main Body button.	



- ◆ If the site has many obstacles around it, the cleaning may not be successful due to interference from them.
- ◆ The robot vacuum cleaner does not climb the carpet areas, footholds, or thresholds when Mopping Guard is installed.


Shadow Cleaning mode

The robot vacuum cleaner focuses cleaning in dark spaces such as under a bed or furniture.

1. Place the robot vacuum cleaner under the bed.
2. Turn on the system power & main power of the robot vacuum cleaner.
3. Select the Shadow Cleaning mode.
4. After cleaning is completed, the robot vacuum cleaner will return to the Charging Station.



- ◆ Use the robot vacuum cleaner with the room light turned on.
- ◆ In a dark room, the product cannot recognize the space under the bed.
- ◆ The robot vacuum cleaner does not climb the carpet areas, footholds, or thresholds when Mopping Guard is installed.

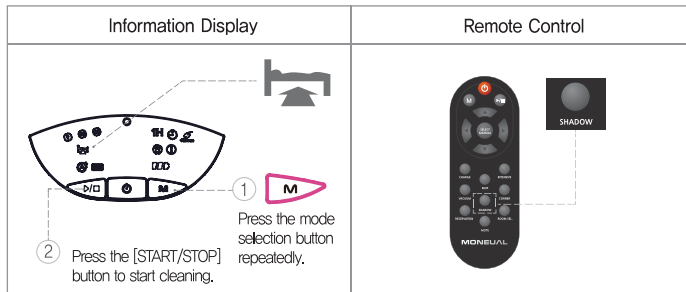


Mop Cleaning mode

Mop Cleaning mode specializes in cleaning hard floors utilizing the washable mop (without vacuum). In this mode, you can use the robot vacuum cleaner for around 5 hours after fully charging.



1. Place a mop on the Mopping Guard.
2. Place the Mopping Guard to meet the mounting hole located at the bottom of the Main Body.
3. Select the Mop Cleaning mode.

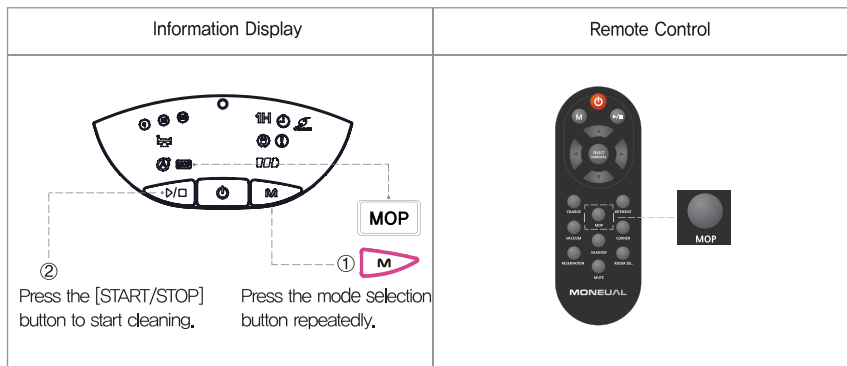

4. Press the [START/STOP] button.
After the cleaning is completed, the robot vacuum cleaner will return to the Charging Station.



- ◆ Mop should be attached to clean hard floors.
- ◆ The robot vacuum cleaner does not climb the carpet areas, footholds, or thresholds when Mopping Guard is installed.
- * It is recommended that charging station is installed in hard floors during cleaning with mop attached.